

# INSTALLATION MANUAL

38140N/V

**LED BUILT IN**      


 
 


   

230V | SMD LED | CCT V | 36W PV | IP65 | PC  
Complete with PV driver / Stainless steel clips.




CCT VARIABLE  
SWITCH

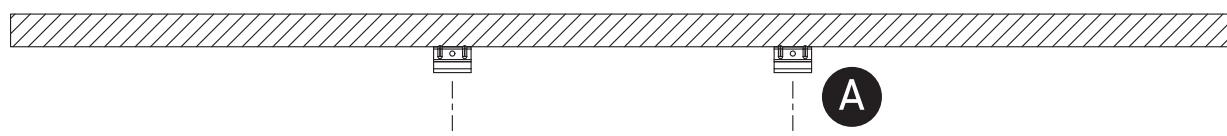
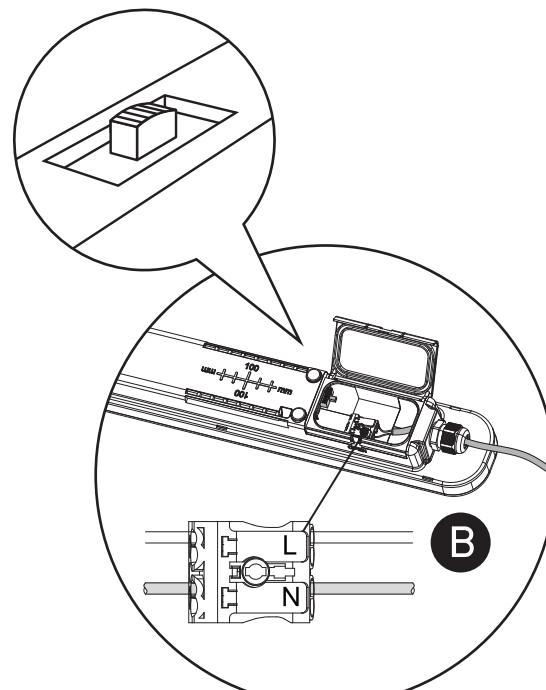
## Power Selection (On Driver)

|    | 1         | 2                     |
|----|-----------|-----------------------|
| ON | 20W 200mA | <input type="radio"/> |
| ●  | 25W 250mA | <input type="radio"/> |
| ■  | 30W 300mA | <input type="radio"/> |
| □  | 36W 350mA | <input type="radio"/> |
| ○  |           | <input type="radio"/> |

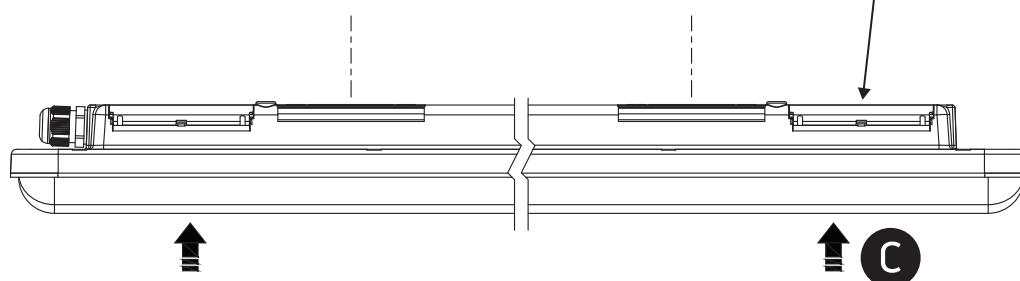

## Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

[www.1-light.eu](http://www.1-light.eu)