 
## **INSTALLATION MANUAL**

42001ATR, 42002ATR


48V | 1m/2m Recessed Profile | 0N/0FF/DALI | Aluminium Max 10m/driver | Max 400W/circuit










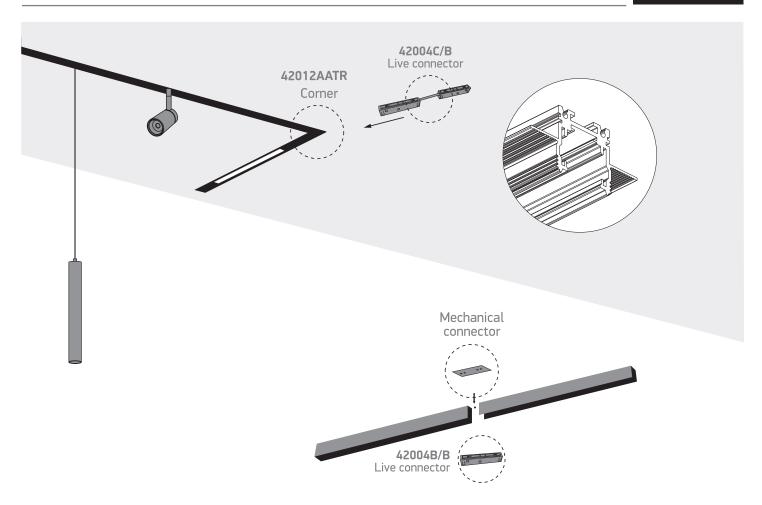

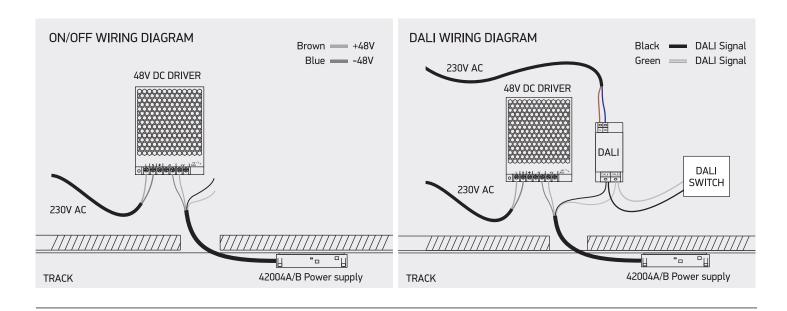

## Warnings:

- 1. Make sure that the product is installed properly before connecting to electricity.
- 2. Do not cover the fitting.
- 3. Maintenance and installation should only be carried out by a professional electrician.

 
## **INSTALLATION MANUAL**

42001ATR, 42002ATR


48V | 1m/2m Recessed Profile | 0N/0FF/DALI | Aluminium Max 10m/driver | Max 400W/circuit









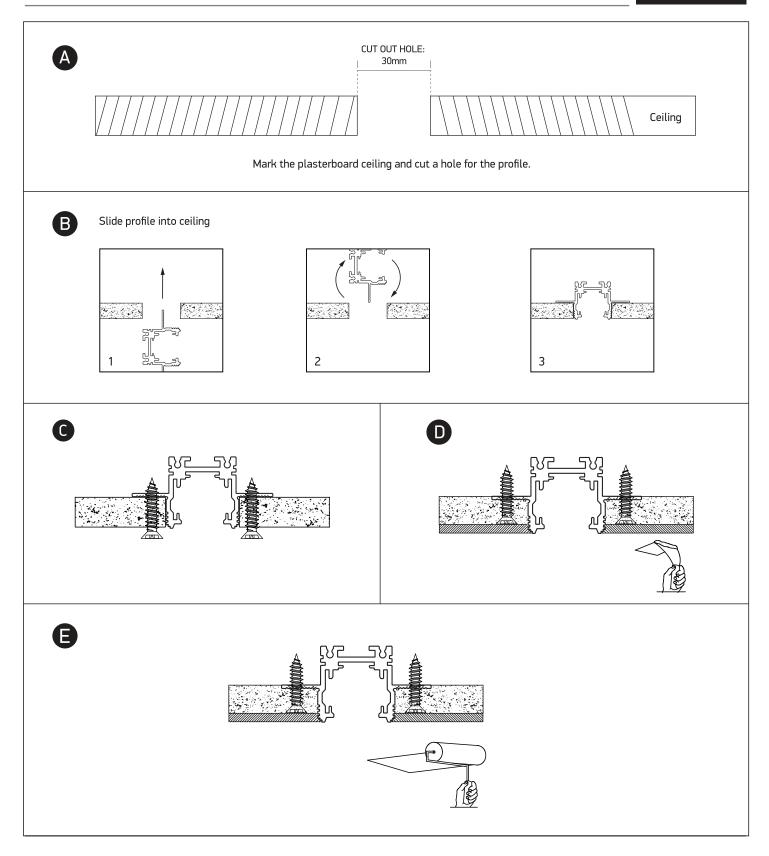

## Warnings:

- 1. Make sure that the product is installed properly before connecting to electricity.
- 2. Do not cover the fitting.
- 3. Maintenance and installation should only be carried out by a professional electrician.