

INSTALLATION MANUAL

6306

LED
BUILT IN



DC 40W
MOTOR

6
SPEED



LIGHT ON/OFF SWITCH


22W LED

2000 LUMEN

230V | LED 22W | DC MOTOR 40W | IP20 | Metal body | ABS blades | Rod mounted

- Maximum air flow rate 142m³/min
- Service value 3,5/W
- Standby power consumption 0,5W

- Fan sound power level 50dB(A)
- Maximum air velocity 3,5 m/sec.
- Max RPM 215

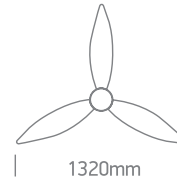

one
LIGHT

1

Install the fan blades and tighten screws.

2

Install LED plate and connect cable.

3

Install ceiling bracket.

4

Remove the R clip from the pin. Then remove the pin from the rod.

5

A Place the parts on the rod.
B Pass wires through rod.

6

A Put the rod into the motor and install the pin and R clip.
B Tighten all the nuts and screws.

7

Hang the fan onto the ceiling bracket.

8

Place the receiver on the hanger bracket.

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Maintenance and installation should only be carried out by a professional electrician.

INSTALLATION MANUAL

6306

9

Blue
Brown
Green and yellow

Connect wires.

10

1
2
3

11

Install the diffuser onto the LED plate.

REMOTE CONTROL

Requires 2xAAA batteries. Remove batteries if not used for long period of time.

1 LED indicator	8 Fan speeds: To turn fan ON 1 (lowest) to 6 (highest)
2 ON/OFF	9 LED light ON / OFF
3 Mute sound	10 LED dimmer
4 Warm white LED	11 Breeze: Fan speeds automatic cycle between 1 to 6
5 Cool white LED	12 Vacation mode: Switch on the light kit 5 minutes each 2 hours
6 Daylight LED	13 Reverse function for winter and summer
7 Fan OFF	14 Timer: Fan stops after 2h/4h/8h

PACKAGE CONTENTS

- 1 Hanger bracket
- 2 Receiver
- 3 Rod assembly
- 4 Canopy
- 5 Canopy cover
- 6 Motor
- 7 22W LED
- 8 Remote control + holder
+2 mounting screws
+1.5V (AAA)x2 batteries
- 9 Cover
- 10 Diffuser
- 11 Fan blades (3pcs)

A Screws for blades
B Mounting hardware
C Blade balancing kit

NOTE: When switching mains ON, light automatically turns on.

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Maintenance and installation should only be carried out by a professional electrician.